



## Repair Kits

When ordering, specify Ordering Code, Kit Number and Valve Size.

### Bonnet Kit

Ordering Code	Kit No.	Size	
		in.	mm
7017531	ARK A200 B	1/2 - 3/4	15-20
7017532	ARK A200 B	1	25
7017533	ARK A200 B	1 1/2 - 2	40-50

Kit consists of: **Bonnet, bonnet O-ring, vent spring, hood and hood screws.**

### Check Kit

7017534	ARK A200 CK	1/2 - 3/4	15-20
7017535	ARK A200 CK	1	25
7017536	ARK A200 CK	1 1/2 - 2	40-50

Kit consists of: **Check disc assembly (disc and disc holder), bonnet O-ring and check spring.**

### Rubber Total

7017537	ARK A200 RT	1/2 - 3/4	15-20
7017538	ARK A200 RT	1	25
7017539	ARK A200 RT	1 1/2 - 2	40-50

Kit consists of: **Vent seal, check disc and bonnet O-ring.**

### Vent Kit

Ordering Code	Kit No.	Size	
		in.	mm
7017540	ARK A200 V	1/2 - 3/4	15-20
7017541	ARK A200 V	1	25
7017542	ARK A200 V	1 1/2 - 2	40-50

Kit consists of: **Float vent disc assembly (vent float, seal and spring) and bonnet O-ring.**

### Seat Kit

7017543	ARK A200 S	1/2 - 3/4	15-20
7017544	ARK A200 S	1	25
7017545	ARK A200 S	1 1/2 - 2	40-50

Kit consist of: **Seat, seat O-ring and bonnet O-ring.**

## Freeze Protection Guidelines

### Purging of a PVB Assembly with Pressurized Air:

1. Close main shutoff valve.
2. Open upstream drain, test cocks and isolation ball valves to depressurize line.
3. Purge with pressurized line
4. Leave test cocks and isolation ball valve handles in 45° angle to drain ball valves and prevent casting damage