







Modification Overview

Production of the 975XL2 began in 2010 and is current.

> This version is Lead Free.



Check Cover Removal

- Cover is threaded into body and o-ring sealed.
- Cover is spring loaded.

Loosen cover with wrench, then remove by hand while holding tightly against spring pressure.



Check Valve Removal

- Poppet style check valve.
- The poppet and spring are free once the cover is removed.



Check Seat Removal

 Check seats are threaded into body and o-ring sealed.
A "special tool" is needed for removal.



Check Disc Replacement


- Remove screw and disc washer from poppet.
- Reassemble in reverse order.





Check Valve Reassembly Notes

- Inspect and clean the guide bore on the cover.
- The stem must move freely in the guide bore.
- Reassemble in reverse order.

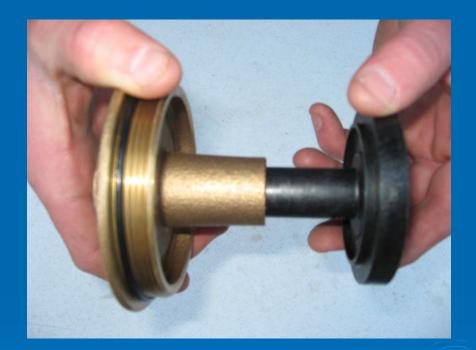

RV Cover Removal

 Cover is sealed by the diaphragm.
Cover has a slight spring load.
Hold cover firmly as the bolts are removed.



RV Stem Removal


- Gently pull on the diaphragm to remove the RV stem.
- The spring should fall out when the stem is removed.





RV Seat Removal

- The seat is threaded into body and o-ring sealed.
- A "special tool" is needed to remove the RV seat.

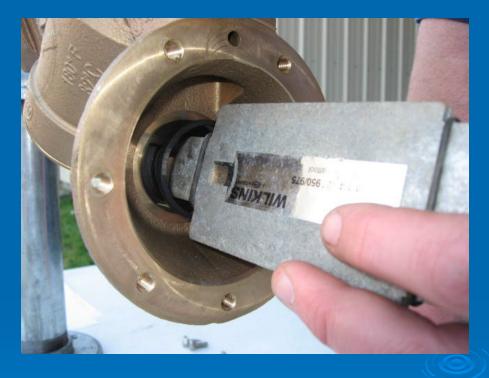

RV Stem Disassembly

- Remove the retaining screw.
- Pull the disc retainer and stem apart.






RV Rubber Replacement

- The diaphragm and seat disc are free once the stem is disassembled.
- Replace rubber in reverse order.
- Lubricate plunger oring on stem.



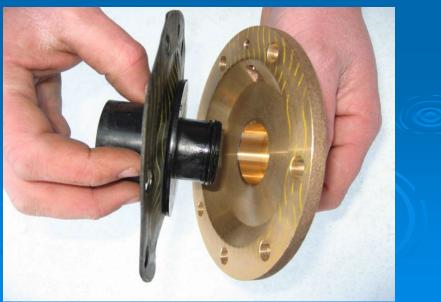

RV Reassembly Notes

- Reassemble the stem in reverse order.
- Position spring in body.
- Make sure diaphragm does not cover hole for sensing line.

