

200B

1/2" – 2"



American Backflow
Products Company



Modification Overview

Production of the 200B (Watts 719) began in 2003 and is current.



Check Cover Removal

Cover is threaded into body and o-ring sealed.

Cover is spring loaded.



Check Valve Removal

Poppet style check assembly.


The poppet and spring are free once the cover is removed.



Check Seat Removal


The check seat or (cage) is pushed into the body and o-ring sealed.

Simply pull the seat straight out of the body.

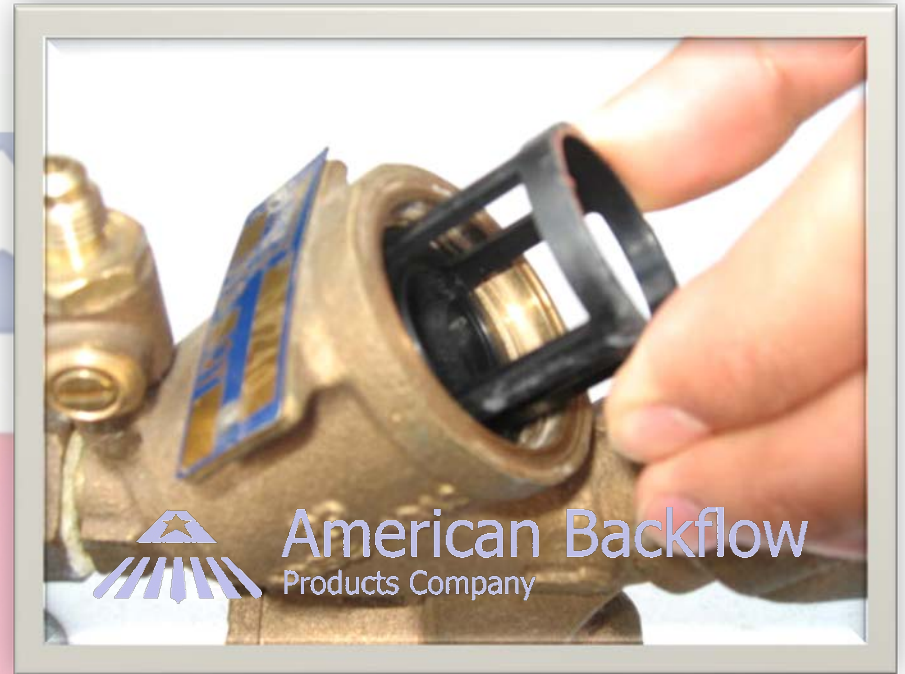

Check Disc Replacement

Remove screw and disc washer from poppet.

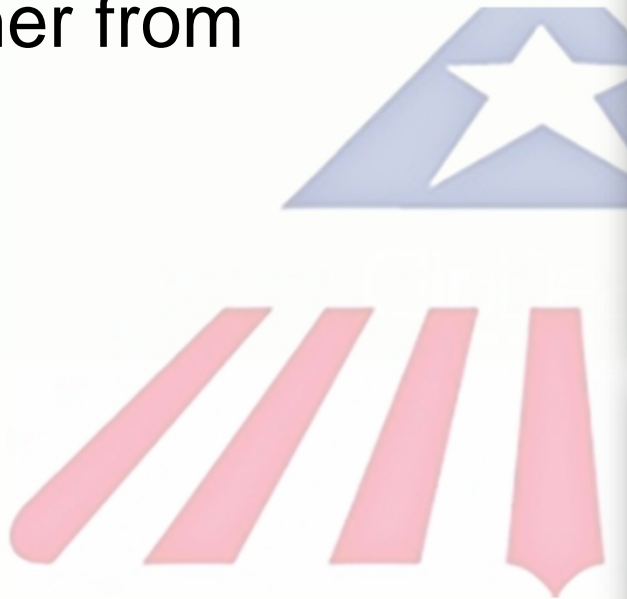

Check Valve Reassembly Notes

Inspect and clean the guide bore on the cover.

The stem must move freely in the guide.

Reassemble in reverse order.

