

909SRT-4-10

4" - 10" 909 / 709 Seat Puller Kit

Watts Models:

4" - 10" 909, LF909

4" - 10" 709, 709DCDA

Use:

Removal of check valve seat from
valve body.

Kit Includes:

Mounting plate

4" Hook plate assembly

5/8" All-thread rod for 6"

3/4" All-thread rod for 8" & 10"


Nuts and washers



Seats secured by two retaining wires.

Pull one wire clockwise and the other wire counter clockwise.

Seats are o-ring sealed and pull straight out of body.

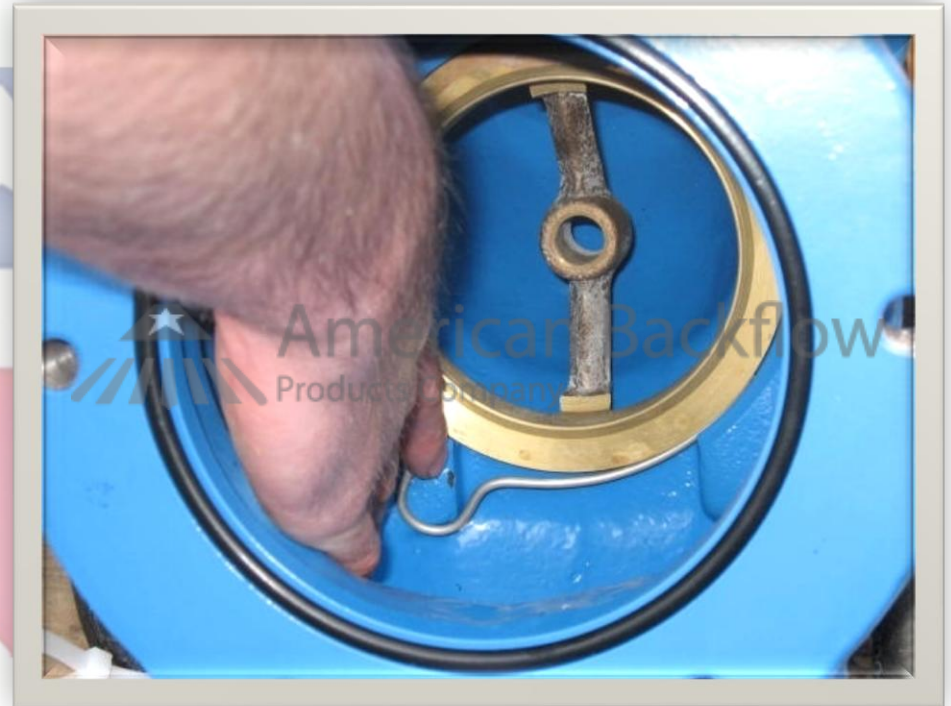


4" Models

Position hook plate assembly onto seat guide arms.

Install hook plate to mounting plate.

Secure mounting plate to valve body.

Tighten all-thread until the seat is free.

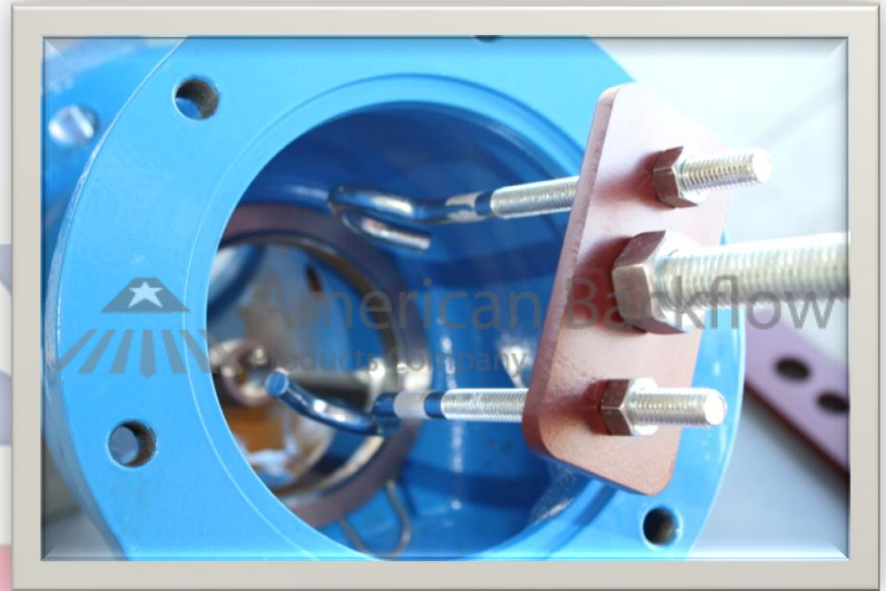

6" - 10" Models

Install all-thread rod,
nut and washer
through center guide
on seat.

Secure mounting
plate to valve body.

Tighten all-thread
until the seat is free.

