


# 007DCDA 2"

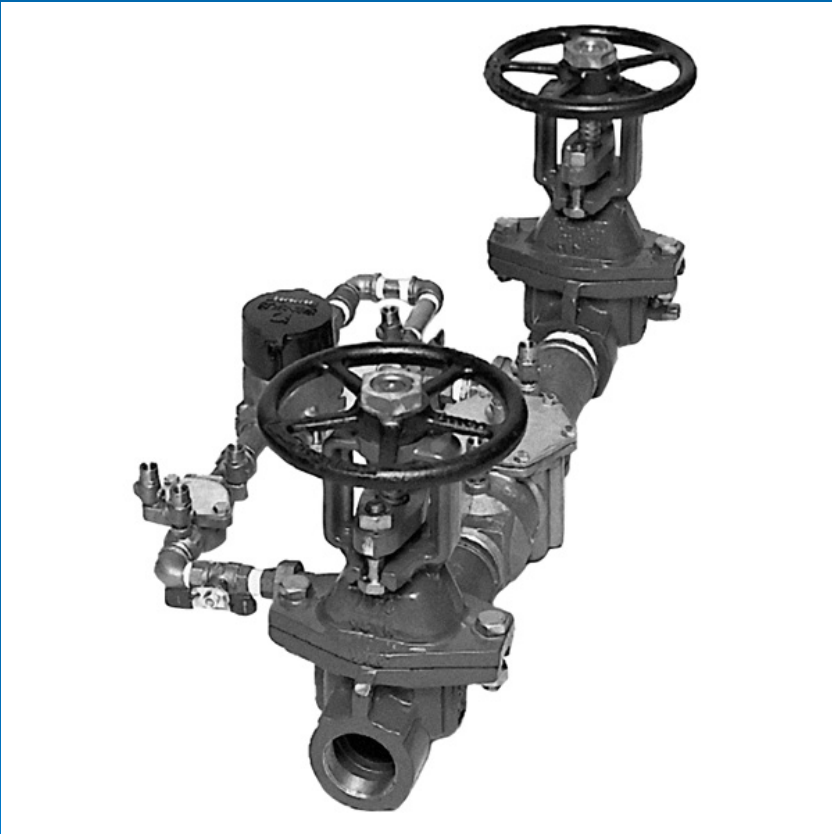

# *Modification Overview*

- Production of the 2" 007DCDA began in 1998.
- Currently uses a 1/2" 007 for the bypass assembly.


# Single Access Cover Removal

- Cover is o-ring sealed.
- Remove bolts.
- Lift cover straight off.



# Check Valve Removal

- Check valve modules.
- Modules sealed by o-ring and secured by a retainer.
- Slide retainer straight out of body.
- Modules can now be removed by hand or with a screwdriver flat.

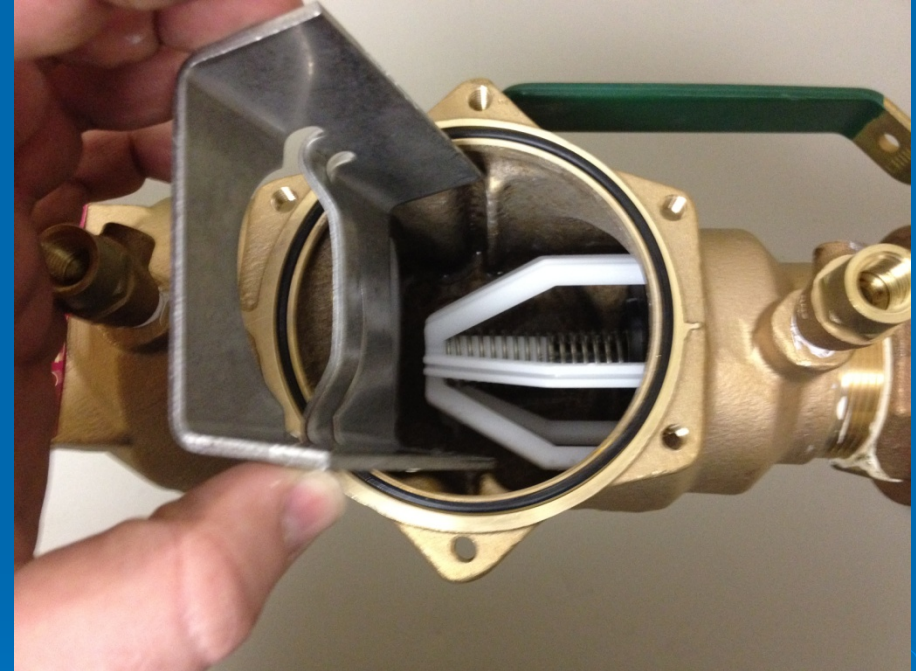



# Check Seat Removal

- \* Check seats are attached to the cage with a bayonet type locking system.
- \* Module is spring loaded- Hold firmly.
- \* Hold the cage in one hand, push the seat inward and rotate clockwise.



# Check Disc Replacement

- Check disc and disc holder can be replaced as one piece.



# *Check Valve Reassembly Notes*

- Reassemble in reverse order.
- Apply lubricant to o-rings.
- If check retainer does not slide into place easily, make sure checks are seated properly.

