

# 719, LF719

## 1/2" - 2"



American Backflow  
Products Company



# Modification Overview

Production began in 2003 and is current.

The  $\frac{1}{2}$ " -  $\frac{3}{4}$ " 719R10 utilizes 1" repair kits.


The  $1\frac{1}{4}$ " 719R15 utilizes  $1\frac{1}{4}$  -  $1\frac{1}{2}$ " repair kits.

The lead free (LF) version was introduced in 2009.

# Check Cover Removal

Cover is threaded into body and o-ring sealed.

Cover is spring loaded.

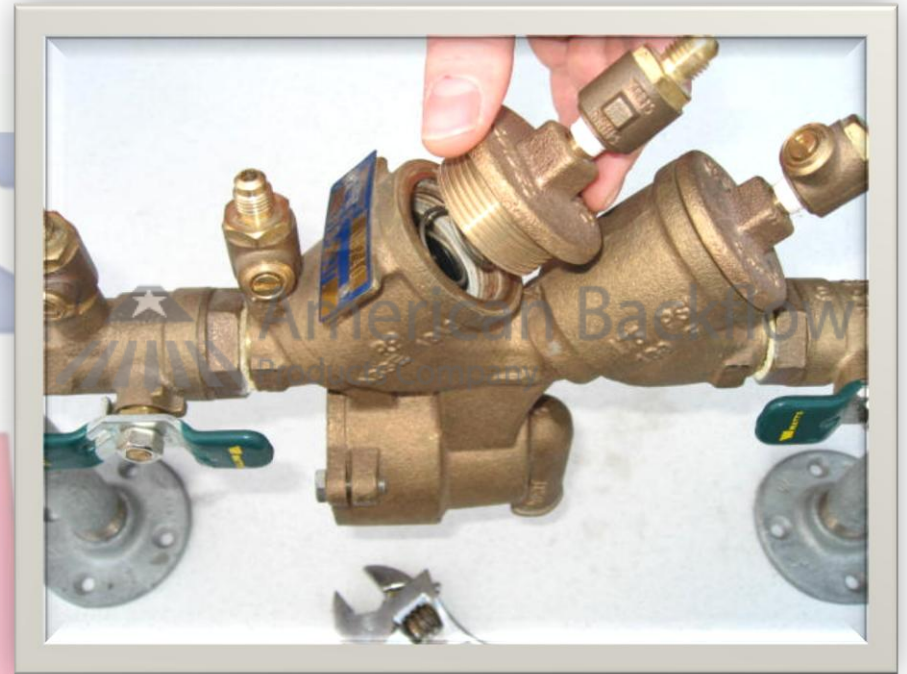


**American Backflow**  
Products Company

# Check Valve Removal

Poppet style check assembly.

The poppet and spring are free once the cover is removed.

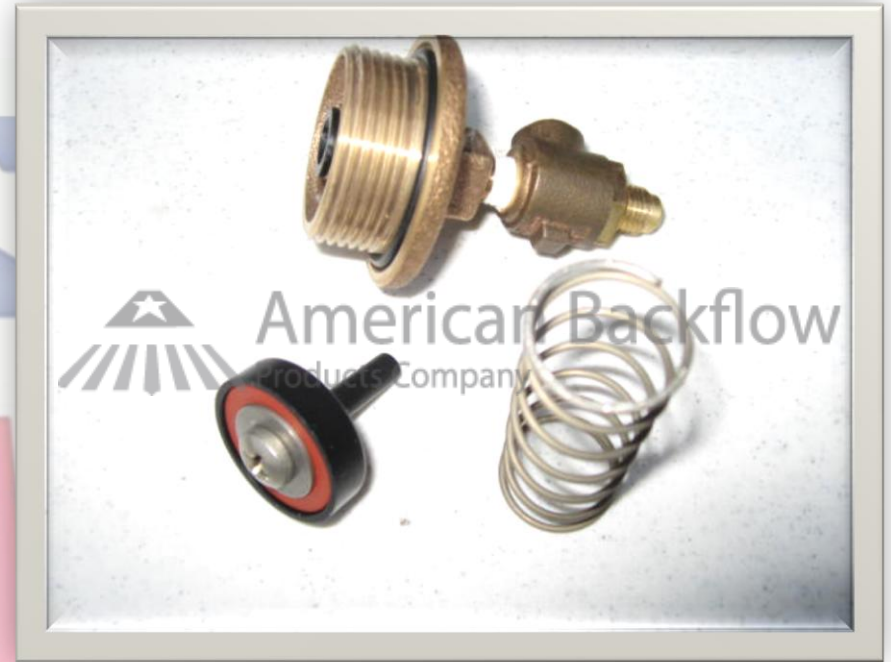

# Check Seat Removal

The check seat (cage) is pushed into the body and o-ring sealed.

Simply pull the seat straight out of the body.



# Check Disc Replacement

Remove screw and disc washer from poppet.





# Check Valve Reassembly Notes

Inspect and clean the guide bore on the cover.

The stem must move freely in the guide.

Reassemble in reverse order.

